
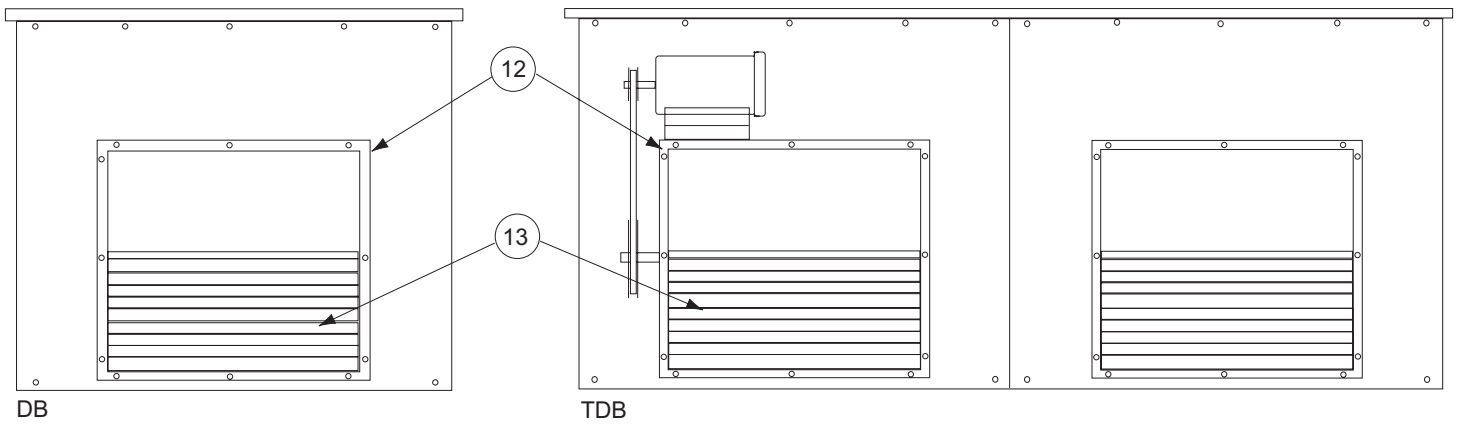


Parts List

DB and TDB

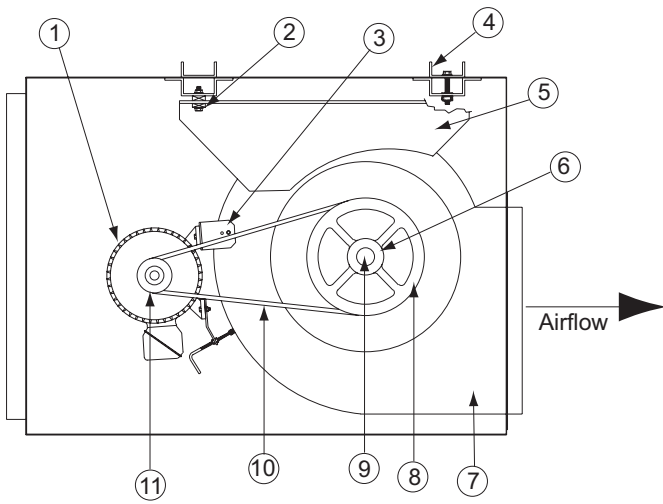

Part No.	Description	
	DB	TDB
1	Motor	Motor
2	Rubber Isolators (4)	Rubber Isolators (8)
3	Pivoting Motor Base	Pivoting Motor Base
4	Hanger Channel (2)	Hanger Channel (2)
5	Blower Bracket (2)	Blower Bracket (3)
6	Bearings (2)	Bearings (4)
7	Blower	Blower (2)
8	Driven Sheave	Driven Sheave
9	Shaft	Shaft
10	Belt Set	Belt Set
11	Driver Sheave	Driver Sheave
12	Outlet Flange	Outlet Flange (2)
13	Wheel	Wheel (2)