

# Belt Drive Parts List - ERV 1500 through ERV- 10000

Part Number	Description	Quantity
1	Cassette Access Door	1
2	Filters	See Table Below
3	Filter Rack	2
4	Base	1 - ERV 1500, ERV 2500 2 - ERV 3500 - 10000
5	Intake Panel	1
6	Intake Weather Hood	1
7	Blower Mounting Rails	2
8	Discharge Blower/Electrical Panel Access Door	1
9	Electrical Panel Compartment	1
10	Discharge Panel	1
11	Discharge Motor	1
12	Discharge Blower	1
13	Discharge Hood	1
14	Filter Access Door	1
15	Base Blockoff Arr. H & I	1

Part Number	Description	Quantity
16	Filter Access Panel	1
17	Lower Cassette Guide	2
18	Return Air Cover Arr. H & I	1
19	Outlet Panel	1
20	Blockoff Panel	2
21	Blower Blockoff Arr. H & I	1
22	Intake Blower	1
23	Blower Cover Arr. V	1
24	Intake Motor	1
25	Upper Door Channel	1
26	Upper Cassette Guide	2
27	*Cassette Assembly	1
28	Top Cap (Not Shown)	1 - ERV 1500, ERV 2500 2 - ERV 3500 - 10000

\* Parts list for cassette assembly on page 16.

## Filter Size

Size	Filter Size
1500	(2) - 12 x 24, (2) - 20 x 24
2500	(4) - 20 x 25
3500	(4) - 14 x 25, (4) - 16 x 25
4500	(10) - 16 x 20
5500	(12) - 16 x 20
7000	(4) - 20 x 20, (8) 20 x 24
8500	(12) - 20 x 24
10000	(8) - 20 x 24, (8) - 18 x 20

All dimensions in inches.

